

— wizer —

# SMART HOME Cyber Security GUIDE

---

[wizer-training.com](https://wizer-training.com)

Wizer

1

## CHANGE THE DEFAULT PIN CODE

If you have a Smart TV or Device, the default PIN code is probably 0000 or something similar. Change it!

Wizer

2

## KEEP SMART DEVICES ON A SEPARATE WIFI NETWORK

Setup a Wifi network just for your Smart Devices, so in case your TV was hacked they can't connect to your computer.

— wizer —

3

## **DISABLE STREAMING SERVICES YOU ARE NOT USING**

If you are using Fire TV or other streaming solutions, then turn off Wifi on your TV because you won't be using it.

Wizer

4

## **MAKE SURE ALL YOUR DEVICES ARE UPDATED REGULARLY**

If automatic updates are available for software, hardware, and operating systems, turn them on.

— wizer —

5

# **DON'T REUSE THE SAME PASSWORD ON ALL DEVICES**

Chose a complex password for each device and make it unique.

Wizer

6

## TURN ON TWO-FACTOR AUTHENTICATION

A code will be sent to your phone  
whenever anyone attempts to login.

— wizer —

7

**DON'T PLACE SMART  
DEVICES WITH CAMERAS  
IN BEDROOMS**

Or anywhere you feel uncomfortable  
in case they get hacked.



— wizer —

# **“Security Awareness Simply Explained”**

[wizer-training.com](https://wizer-training.com)